







Position	Code	description
	5313224561	INNER COVER
	5332224100	MOTOR BELT GRINDER
	9828300000	PUSH-PUSH
	5513211891	PENNELLO-RASCHIETTO+SETOLE NERO(PP) ECAM
	6113210111	STAFFA TCO(ACC.C70) (GENERATORE) ECAM
	6113210121	BRACKET
	5313225641	SUPPORT
	5313213451	WIRE CLAMP
	5313219181	GASKET BELLOWS GRINDER
	SER0354	Lubricating grease VERKOFOOD WR2 TUBE 5GR
001	5513216231	REAR PANEL
002	7313220771	COVER
003	5313225831	COVER DUST FOR PUSH PUSH
004	5513216841	COVER
005	IT0263	SEE TECNICAL INFORMATION
006	5313233411	COVER FITTED FOR PUSH PUSH
007	7313226531	CONTROL PANEL ASSEMBLY
009	7313220791	COVER ASSEMBLY
010	5332131100	TUBE
013	5313231231	CARAFE
014	5332169200	MEASURING SPOON
015	5313225791	COVER
016	5513216211	SIDE RIGHT
017	5513216221	SIDE LEFT
018	5313213291	COVER
019	5313235921	GASKET
020	5313214981	FILTER
023	6113210251	SPRING
024	7313220761	TANK
025	IT0312	SEE TECNICAL INFORMATION
026	5513216181	FRONT PIECE
027	7313226521	DISTRIBUTING
028	7013211031	CUP PLATE
029	5513216201	CONTAINER
030	5313213551	TRAY
032	IT0312	SEE TECNICAL INFORMATION

033	5313222641	FLOAT
034	5313226961	TRAY
035	5332177500	O-RING
036	5313217751	O-RING
037	5332169300	TUBE LOWER
038	5513270219	TUBE
039	5913212631	KNOB
040	5313225891	COVER
041	5513217201	LED
042	9812631250	SCREW
043	5313227651	COVER
044	5513227891	INFUSER
045	5313213191	LEVER
046	6013213181	FILTER (TAI-FENG)
047	5332139500	VALVE
048	5332149100	O-RING
049	6113210131	SPRING
050	5332139600	STOPPER
053	6132112200	SPRING
054	5313213211	PISTON
055	5313213241	RUBBER PAD
056	5313213591	STOPPER
057	7313212631	TROLLEY
058	5313224471	COVER
059	7313214521	REGULATOR
060	6113210161	PIN
061	9820000480	WASHER
062	9813431616	SCREW
063	5313245721	HOUSING RIGHT
064	7313230521	COMPLETE GRINDER
065	5113210211	MICROSWITCH
066	5313249511	SWITCH HOLDER
067	5113210371	SWITCH
068	5232114100	CONNECTOR
069	5313216331	FUNNEL
070	5313213371	FLAP
071	5113211311	PUMP
072	IT0286	SEE TECNICAL INFORMATION

073	6113210201	SPRING
074	5313216281	SUPPORT
075	5313213391	ARM
076	6113210181	SPRING
077	5313213431	RUBBER PAD
078	5313256591	HOUSING LEFT
079	5313229731	FOOT
080	5513219881	TUBE PTFE L=270 NUT 1BUSHE
081	9813433816	SCREW
082	5013211551	POWER SUPPLY CORD
083	5513219871	TUBE PTFE L=460 NUT 1BUSHE
084	5313217701	O-RING D=3,85
085	5513212871	TUBE PTFE DI2-DE4 L=97 2BUSHES
086	5213216261	TCO
087	5213211161	PROTECTOR
088	6132101300	CLIP
089	5513211371	REGULATOR
090	5313230671	SUPPORT
091	5332199500	TUBE (SIL NAT)DI=4 DE=8 L=150
093	5213215671	SENSOR NTC
094	5213214671	FLOWMETER
095	5313236711	TUBE 90°
096	5513228011	TRANSMISSION KIT ( ECM)
097	7313217261	ASS. GRINDS (ECM)
098	5313228791	GASKET
099	5213218311	SOLENOID VALVE
101	5313243071	BELT
102	5213213981	SENSOR BOARD
103	5213215001	MOTOR BOARD (ECM)
104	5132110500	MICROSWITCH
105	5513213101	TUBE PTFE DI2-DE4 L=380 2BUSHES
106	5313227841	TUBE 90°
107	5513212901	TUBE PTFE DI2-DE4 L=290 2BUSHES
108	5332239200	CONNECTOR
109	5313225171	CONNECTION
110	5313224491	SUPPORT
111	5213218421	SOLENOID VALVE
112	5313225161	STOPPER



113	5513213761	TUBE PTFE DI2-DE4 L=190 2BUSHES
114	5513212881	TUBE PTFE DI2-DE4 L=270 2BUSHES
116	7313219401	SAFETY VALVE
117	5313217871	TUBE DI=3 DE=6 L=200
118	5313247361	COVER
119	5113210211	MICROSWITCH
120	5513214291	GENERATOR
121	5313218351	CONNECTION
123	5013252961	WIRING TCO
124	5013252541	WIRING TCO
125	5332239300	SPACER 5XD5.2XD7.9 NATURAL
126	6113210021	CLIP
127	5513213901	TUBE PTFE DI2-DE4 L=320 2BUSHES
128	5213218321	SOLENOID VALVE
129	5132104100	MICROSWITCH
130	5313218821	SUPPORT MICROSWITCH
133	7313243821	MECHANICS VALVE
135	5332149100	O-RING
136	5313217601	FILTER
137	9812631250	SCREW
138	5313220131	RUBBER PAD
139	7313244361	COUPLING CARAFE
140	5313220031	O-RING
143	5313221011	O-RING
144	6132101300	CLIP
145	5132104100	MICROSWITCH
146	5232104600	SENSOR REED
147	6213210351	NUT
148	6213211521	BUSH
149	6113212051	CONNECTION
150	6113210741	CONNECTION
151	5213215201	POWER BOARD